



## Fruitland Vacuum Pump Designations

<p><b>“E”</b> Stands for Elbow attachment. This is only available on our RCF370 and RCF500 Models. The Elbow is installed instead of the Filter. This allows for future change over into a Filter Pump.</p>	
<p><b>Further Examples</b></p>	
<p><b>500LUFH</b> Stands for a “RCF500” Vacuum Pump</p>	<p><b>370ERSA</b> Stands for a “RCF370” Vacuum Pump.</p>
<p><b>L-</b> Left hand or Counter-clockwise rotation.</p>	<p><b>E-</b> Elbow attachment on the Four-Way Valve to accommodate future Filter.</p>
<p><b>U-</b>Four-Way valve on the top.</p>	<p><b>R-</b> Right hand or Clockwise rotation</p>
<p><b>F-</b> Filter Option on the Four-Way Valve.</p>	<p><b>S-</b> Four-Way Valve located on the side.</p>
<p><b>H-</b> With Hydraulic Drive Adapter option.</p>	<p><b>A-</b>Right Angle Drive Adapter</p>
<p><b>Explanation of Lettering</b></p>	
<p><b>L-</b> Left hand or Counter- Clockwise. When looking at the pulley or drive shaft.</p>	<p><b>R-</b> Right hand or Clockwise rotation when looking at the pulley or drive shaft.</p>
<p><b>S-</b>Stands for the location of the Four-Way Valve, when the Valve is on the side of the Pump.</p>	<p><b>U-</b> When the Four-Way Valve is mounted on the top of the Pump, available for all models.</p>
<p><b>F-</b> Filter option available only on RCF370 &amp; RCF500 models</p>	<p><b>H-</b> Hydraulic Drive Adapter option available on RCF370, 500, 800 &amp; 1200 models</p>
<p><b>FH-</b> Stands for the combination of Filter and Hydraulic option. Available for RCF370 &amp;RCF500 models</p>	<p><b>LSS-</b> Stands for Left Side Special option. Available for RCF370 &amp; RCF500 models</p>
<p><b>A-</b>Stands for Right Angle Drive Adapter only. Available for RCF370 &amp; RCF500 models.</p>	