
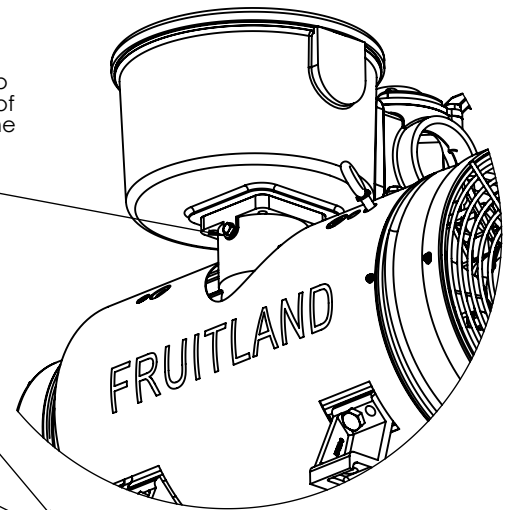


Item #	Part #	Description	Qty.	Price
1	OR11-A-01	6QT. PLASTIC TANK WITH BREATHER CAP	1	
2	FK500-A-01	BALL VALVE, 1/4"	1	
3	FK500-01	ANGLE BRACKET FOR REMOTE VALVE INSTL. SEE DWG. FK500-01	1	
4	FK500-A-02	STRAIGHT BRASS FITTING, 1/4" NPT FEMALE TO 1/4" ID HOSE BARB	1	
5	OR11-A-02	Ø1/4" ID FUEL LINE RUBBER HOSE	10 FT.	
6	OR11-A-03	HOSE CLAMP 7/32"-5/8" (SAE 4)	4	
7	FK500-A-03	STRAIGHT BRASS FITTING 1/4" NPT MALE TO 1/4" ID HOSE BARB	1	
8	OR11-A-04	ELBOW 1/4" NPT MALE TO 1/4" ID HOSE BARB FITTING BRASS	1	

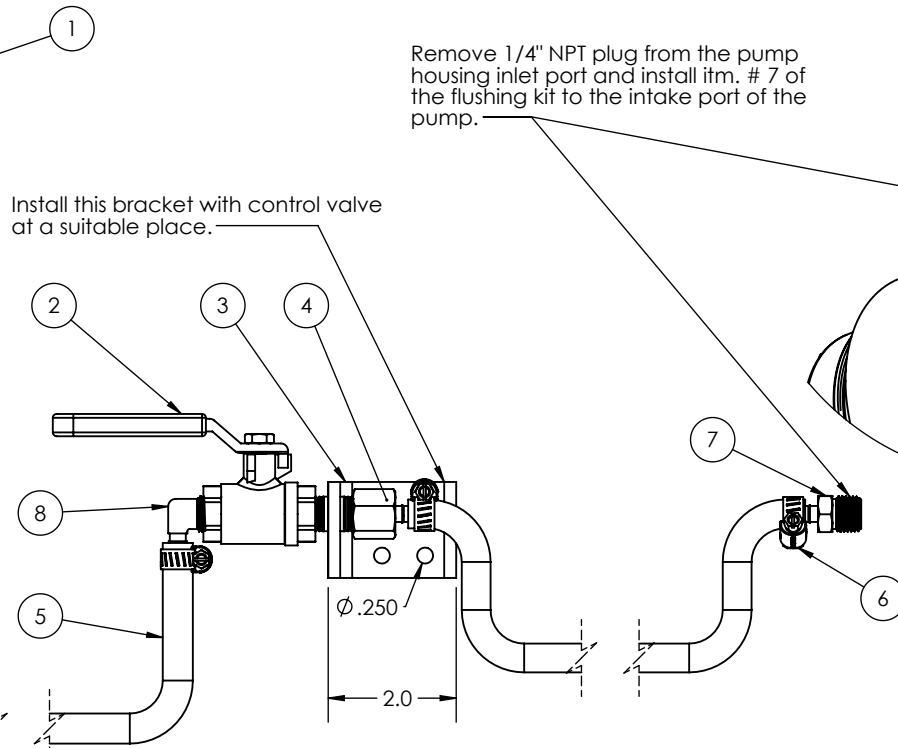

PART # FK500

Procedure:

- Flushing Fluid: ¾ of diesel fuel mixed with ¼ of pump oil by volume.
- Run the pump under vacuum and slowly open the ball valve itm. 2.
- Pass approx. 2 -3 liters of flushing fluid through the pump while throttling (restricting and releasing) the flushing fluid through the ball valve.
- After flushing, close ball valve and run the pump for few minutes to remove all the flushing fluid from the pump.
- Drain used flushing fluid from the oil catch muffler or oil seperator.
- Flushing procedure will not work if the pump is running in pressure mode.

**PROPRIETARY AND CONFIDENTIAL**  
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FRUITLAND MANUFACTURING. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FRUITLAND MFG. IS PROHIBITED.

	NAME	DATE	 <small>324 Leaside Avenue        Stoney Creek, Ontario,        CANADA L8E 2N7        Phone: (905) 662-6552        Fax: (905) 662 9875</small>
CREATED	K.A.	7/24/2012	
CHECKED			TITLE: Flushing Kit
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL OR .X = ±.015 .XX = ±.010 .XXX = ±.005			DWG. NO. FK500
MATERIAL	--		REV 1
		SCALE: 1:3	WEIGHT:--
			SHEET 1 OF 1